


TODDY® COLD BREW SYSTEM COMMERCIAL MODEL - ASSEMBLY

WASH BEFORE USE. Make sure the spigot with washer is flush with the unit. Position the spigot upside down. Take nut with washer and screw on the end of the shank until hand tight. Continue to hold nut and screw the spigot to the right until it is in its normal vertical position.

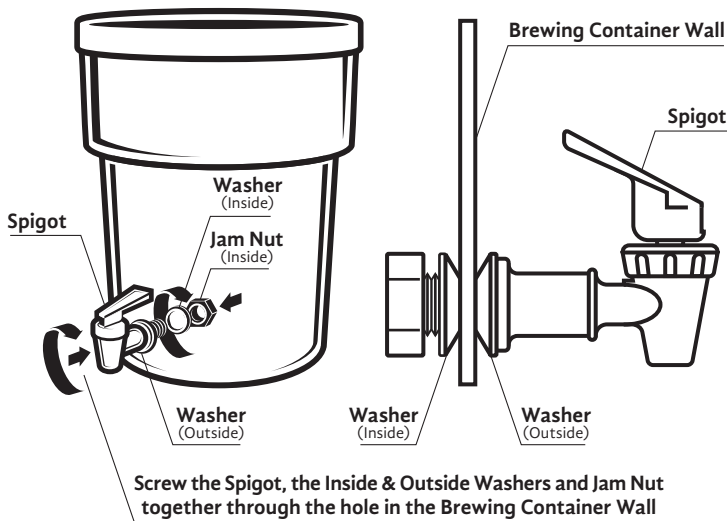

TODDY®
cold brewed. simply better.™

For complete instructions, more recipes and to learn more about Toddy® products visit [ToddyCafe.com/brewing](https://www.toddycafe.com/brewing).

©Toddy, LLC | Version: 12-2018

For questions or to reorder parts, call 1.970.493.0788.

The Toddy® Cold Brew System is proudly made in Loveland, Colorado, USA.